



Do NOT press buttons on atari style controller while programming!

JP1 open, JP2 open : SNES controller connected  
 JP1 close, JP2 open : NES controller connected  
 JP1 open, JP2 close : Reserved for future use  
 JP1 close, JP2 close : ATARI Style controller connected